


Nº	CODE	DESCRIPTION	Nº	CODE	DESCRIPTION
1	BP11001	MOTOR HOUSING	23	BP11023	RETAINING RING
2	BP11002	SPRING PIN	24	BP11024	DISC COVER
3	BP11003	AIR INLET	25	BP11025	BALL BEARING
4	BP11004	THRITTLE LEVER	26	BP11026	CLAMP NUT
5	BP11005	VALVE STEM	27	BP11027	WASHER
6	P16040	EXHAUST DIFFUSER	28	BP11028	SPANNER
7	BP11007	O-RING	29	P16039	RETAINER RING
8	BP11008	VALVE SPRING	30	P11030	GRINDING DISC
9	BP11009	MOTOR GASKET	31	BP11031	O-RING
10	BP11010	REVERSE VALVE	32	BP11032	HEX KEY WRENCH
11	BP11011	REVERSE LEVER	34	BP11034	O-RING
12	BP11012	ROTOR BUSH	35	BP11035	SCREW
14	BP11014	REAR END PLATE	36	BP11036	O-RING
15	BP11015	ROTOR	37	P82002	SPRING PIN
16	BP11016	ROTOR BLADE	41	BP11041	FIXED SHAFT
17	BP11017	SPRING PIN	43	BP11043	SCREW
18	BP11018	CYLINDER	44	P82321	SPRING WASHER
19	BP11019	FRONT END PLATE	45	BP11045	SET SCREW
20	BP11020	BALL BEARING	46	BP11046	SCREW
21	BP11021	AIR REGULATOR	52	BP11052	RUBBER GRIP
22	BP11022	SPINDLE			

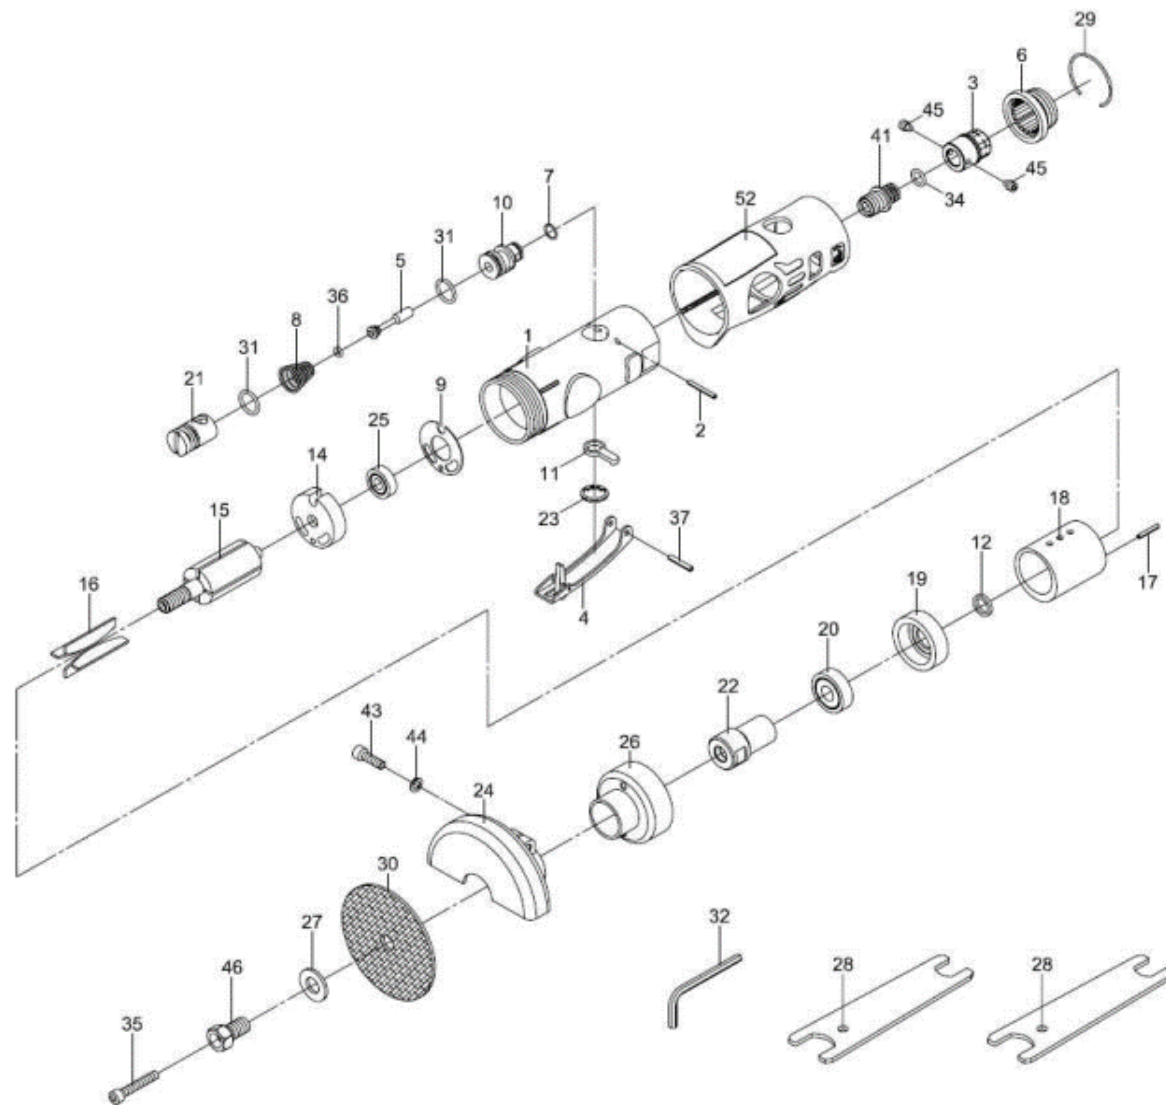

BP110



SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe