
Nº	CODE	DESCRIPTION	Nº	CODE	DESCRIPTION
1	BPC82301	MOTOR HOUSING	28	P16025	CLAMP NUT
2	P16047	SPRING PIN	29	P82618	DRIVE DOG
3	BPC82302	AIR INLET	30	P16027	RETAINING RING
4	BPC82303	TRIGGER	31	P82623	SNAP-RING RTW-21
5	BPC82304	VALVE STEM	32	P82624	CAM SPINDLE
6	BPC82305	REVERSE	33	P82039	STEEL BALL (1/8")
7	P16050	CENTER GEAR	34	P82625	CLUTCH
8	BPC82306	VALVE SPRING	35	P82626	STEEL BALL 1/4"
9	P82609	ORING 12.1*1.6	36	P82627	THRUST WASHER
10	BPC82307	REVERSE LEVER	37	P82704	SPRING
11	BPC82308	EXH. DIFFUSER	38	P82629	WASHER
12	P82635	DECORATING	39	P82630	ADJUST NUT
13	P82325	BALL BEARING	40	P82631	SPACER
14	P16012	END PLATE	41	P82632	CLUTCH HOUSING
15	P16013	ROTOR	42	P16034	BALL RETAINER
16	P16014	ROTOR BLADE	43	P16035	SPRING
17	P16015	PIN	44	P16036	WASHER
18	P16016	CYLINDER	45	P16037	PINION GEAR
19	P16017	FRONT END PLATE	46	BPC82314	O-RING
20	P16018	SPRING	47	P16010	MOTOR GASKET
21	P16019	SPRING GUIDE	48	P82620	SCREW
22	P16020	INTERNAL GEAR	49	P16049	REDUC. SPINDLE
23	BPC82502	PLANET GEAR	50	P82138	O-RING(4.8X1.9)
24	P82118	SET OF 3 PINS	51	BPC82315	IRON SHEET
25	P16022	BUSHING	52	BPC82316	DAMPING
26	P82703	NEEDLE BEARING	53	P82633	KEY
27	P16024	BALL BEARING	54	P82634	HEX WRENCH

(UNITS PRODUCED IN 2020 AND AFTER)

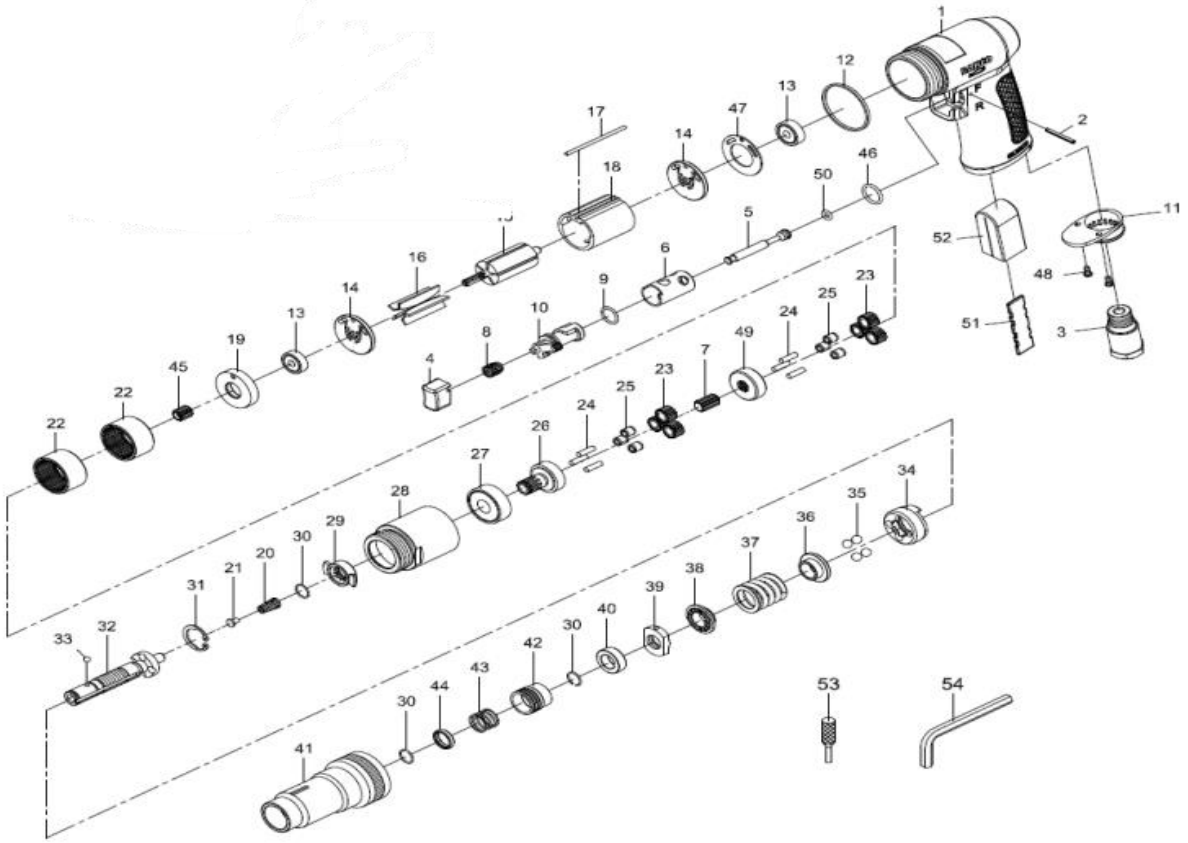

- For units produced in 2020 and after, refer to **BP827 V2** exploded view



BAHCO

BP827

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe

Revision: 01

12022026